

Fluted Tambour | Wood Effect Wall Panels

Technical Sheet

Contents

General information

Dimensions

Installation guide

Page 2

Page 3 - 5

Page 6

Contact us

302-216-6177

support@thewoodveneerhub.com

thewoodveneerhub.com

11.2025_US_Digital

Fluted Tambour | Wood Effect Wall Panels

Our fluted wall panel are an excellent alternative to solid wood tambour panels. It boasts a captivating fluted design that is amplified by the neat slat or ridge pattern on the front.

Each panel is crafted with careful attention to detail. The laminate accurately mirrors the depth and charm of natural wood, offering robust durability and low-maintenance convenience. The lightweight design and interlocking edges make installation straightforward, and the scratch-resistant surface ensures the panel's lasting charm.

| | Four panels in a pack | The Fluted Tambour Wood Effect Wall Panels come in a pack of 4 measuring 5.85" wide for each panel. |
|------------|--------------------------|-----------------------------------------------------------------------------------------------------|
| | Fire rating | The slats on the Fluted Tambour Wood Effect Wall Panels have no fire rating. |
| \bigcirc | Care and maintenance | You can wipe the Fluted Tambour Panels clean with a dry cloth. |


Dimensions

WVH®

| Product name | | Material | Size(s) | Dimensions | SqFt (ft²) | Weight (lbs) |
|--------------|-----------------------------------------------------------|-------------------------------|---------|-------------------------------------------------------|------------|--------------|
| | Oak Ridge Fluted Tambour Wood Effect Wall Panels | Wood Effect Paper Laminate | 10ft | Per Panel: 118.11" (L) × 5.85" (W) × 0.86" (D) | 4.81 SQFT | 10.60 lbs |
| | | | | Per Pack: 118.11" (L) x 22.72" (W) x 0.86" (D) | 18.64 SQFT | 42.40 lbs |
| | Walnut Ridge Fluted Tambour Wood Effect Wall Panels | Wood Effect Paper Laminate | 10ft | Per Panel: 118.11" (L) × 5.85" (W) × 0.86" (D) | 4.81 SQFT | 10.60 lbs |
| | | | | Per Pack: 118.11" (L) x 22.72" (W) x 0.86" (D) | 18.64 SQFT | 42.40 lbs |
| | Oak Slat Fluted Tambour Wood Effect Wall Panels | Wood Effect Paper Laminate | 10ft | Per Panel: 118.11" (L) × 5.85" (W) × 0.86" (D) | 4.81 SQFT | 10.60 lbs |
| | | | | Per Pack: 118.11" (L) x 22.72" (W) x 0.86" (D) | 18.64 SQFT | 42.40 lbs |
| | Walnut Slat Fluted Tambour Wood Effect Wall Panels | Wood Effect Paper Laminate | 10ft | Per Panel: 118.11" (L) × 5.85" (W) × 0.86" (D) | 4.81 SQFT | 10.60 lbs |
| | | | | Per Pack: 118.11" (L) × 22.72" (W) × 0.86" (D) | 18.64 SQFT | 42.40 lbs |


Technical Drawings: Ridge

Depth dimensions

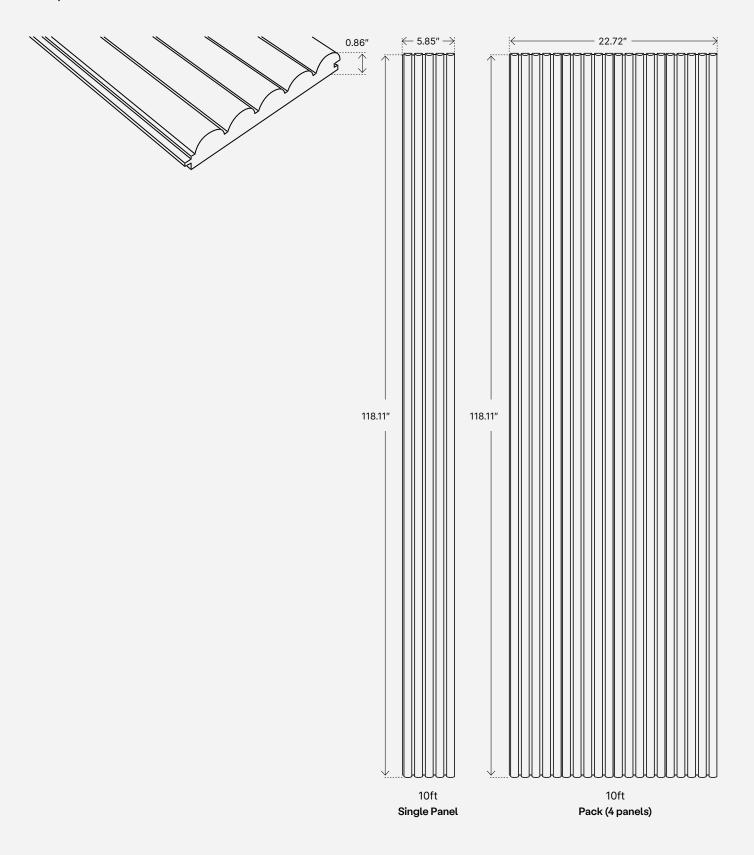

Technical Drawings: Slat

Depth dimensions

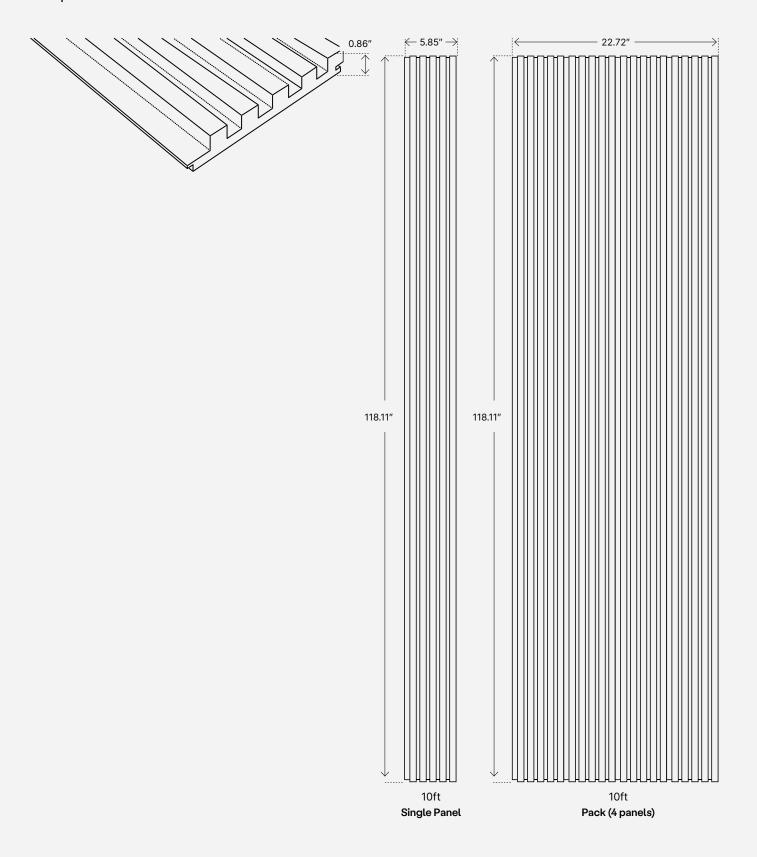

Installation Instructions

How to cut the Fluted Tambour Wood Effect Wall Panels

For the Fluted Tambour Wood Effect Wall Panels if you are cutting width ways, we recommend a sharp, fine saw to cut through the slats.

Tools needed

Measuring tape



Sharp, fine-tooth saw



Masking tape



Sandpaper



Adhesive Glue



Nail gun (optional)



Level



Hand drill



Cloth

How to install the Fluted Tambour Wood Effect Wall Panels

1. Preparation

Ensure the area where you plan to install your panels is clean, dry, and free from obstruction, and you have all materials for installing them. You will need a strong adhesive to install the panels, and a nail gun may be used for additional reinforcement. Measure your space and ensure you have enough panels to cover your space.

2. Cut the panels

Cut the panels using a hand or power saw equipped with a sharp, fine-tooth blade to fit your space. We recommend cutting out any space you need for sockets or lighting at this stage.

3. Glue the panel

Apply an even layer of glue onto the back of the panel, ensuring the edges and corners are well covered. Carefully place the panel onto the desired spot, pressing firmly to make sure the glued surface makes full contact with the wall. Optional: use a nail gun to reinforce the panel as required.

4. Fitting additional panels

Using the tongue and groove installation system, glue and slot the panels together to cover your space. Glue may seep out from the edges of the panels, especially on the join lines. Clean up the excess glue with a damp cloth as you go.

Allow the glue to dry fully before installing any other fixtures onto the panels. Please refer to the adhesive manufacturer's drying and cure time

Need help? Contact us:

Call customer service: 302-216-6177

Monday – Friday 7am - 5pm MST

Email customer service: support@thewoodveneerhub.com

Use live chat:

thewoodveneerhub.com

(Click the pop-up in the bottom right of the screen)

Monday – Friday

